


USER MANUAL ExHale Dispenser

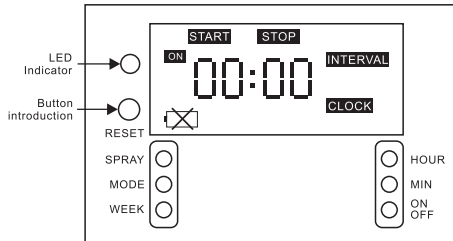

Introduction

This is our new dispenser for the ExHale system. With this dispenser you will now have the opportunity of setting exact time of spraying.

Smart controll - more effective.

Button introduction

RESET: Press and hold for more than 2 seconds to clear all data

SPRAY: Press this button to test spraying

MODE: Adjust settings for working mode

How to use ExHale dispenser:

Step 1: Remove the front cover by pushing the opening mechanism at the back.

Step 2: Remove the head unit by pushing the flap and push the unit downwards. Install 2x D-batteries and install the unit.

Step 3: Set the working mode

If no buttons are pressed within 15 seconds during setup, the machine will automatically return to the main interface.


Set the working mode

1. Press the ON/OFF button
Display ON indicates power on, OFF indicates power off
2. When display shows ON, press MODE for 2 seconds to set the work mode
3. Display shows: START 1
Press HOUR and MIN button to set the exact time you want the dispenser to start spraying. (eg. 23:00)
4. Press MODE, display shows STOP 1
Press HOUR and MIN button to set the exact time you want the dispenser to stop spraying. (eg. 02:00)
5. You can set up to 3 intervals *
If you want to just have 1 interval, press mode button until display shows INTERVAL
6. Display shows: INTERVAL
Press MIN to set the interval between each spray. 3 is default, spraying every third minute.
7. Press MODE, display shows CLOCK
Press HOUR and MIN button to set your local time. (eg. 15:42)
8. Press MODE, installation is now finished.

- * You can install max 3 working intervals. Repeat step 3-4 if you want to do this.

For example Period 1: 23:00-01:00,
Period 2: 02:00-03:00, Period 3:
05:00-06:00

Check before installing ExHale aerosol

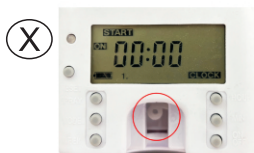

WRONG:

Hammer is exposed.

Push the hammer
with a pen or key



CORRECT:

Hammer is not
exposed.

How to use ExHale dispenser:

Step 4: Install ExHale aerosol. Make sure the can fit tightly in the snap position.


Step 5: Install the front cover firmly.

Step 6: Press TEST, to perform a test spray. Make sure to not face the dispenser towards yourself or anyone else.

Step 7: After successful test spray, place the product on the floor at suitable location. Visit **SKATEK HUB** for more guidance of placement.

NOTE

Never face the dispenser towards yourself or anyone else.

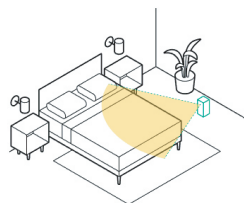

Scan to enter
SKATEK HUB

SKATEK HUB

Here you will find installation guidance, custom placement based on your location, videos, SDS and more information.